



**HRC® 350 Series  
Threaded T-Head**

# Installation Procedure

**SAFETY FIRST!** In all cases, follow jobsite safety plans, and consider your own personal safety. Make sure you are wearing PPE, and are securely positioned so that you will not slip or fall during installation.

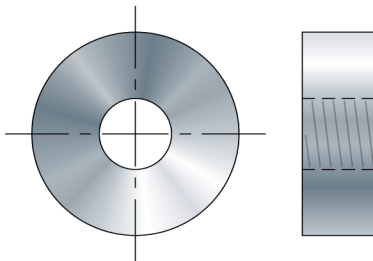


HRC 350 THREADED T-HEAD



HRC 300 THREADED BAR

## Threaded T-Head Installation

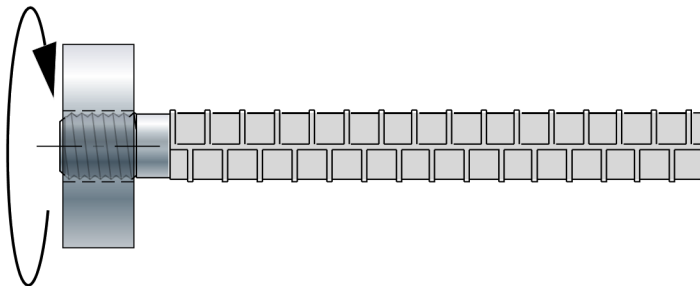

**Hand-Tighten  
To A  
Snug Fit**

1

Remove any debris from the threads on the bar.

2

Remove any debris from the threaded hole in the T-Head.

3


Insert the HRC 350 threaded T-head onto the threaded bar. Hand-tighten to a snug fit by rotating clockwise until threads are fully engaged (minimum distance equal to "T"). Lubricate threads and use a wrench if necessary to keep connection tight/locked.



### Typical Thread Length

Bar Size	#4	#5	#6	#7	#8	#9	#10	#11
T(min)	0.75"	0.75"	1.00"	1.00"	1.125"	1.50"	1.625"	1.625"

\* thread length tolerance is +/- 0.125 in

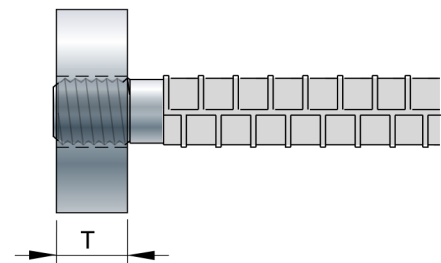

Threaded T-head needs to remain fully engaged and tight after installation and prior to concrete placement. Job site conditions may require additional inspection and/or re-tightening.

CALIFORNIA PROP. 65 WARNING



**WARNING**  
CANCER AND REPRODUCTIVE HARM  
WWW.P65WARNINGS.CA.GOV

**HRC® 350 Series  
Threaded T-Head**



**HEADED REINFORCEMENT CORP.**  
1-800-HRC-6775

11200 Condor Ave., Fountain Valley, CA. 92708, USA  
Tel: 714-557-1455 FAX: 714-557-4460 email: Sales@hrc-usa.com